Cheat Sheet for ICOM IC-208H (Gresham EOC)

(CAPS - tap quickly; **BOLD** – hold for 1 sec)

Set Power Level: LOW/DUP, repeat to desired level (If LOW or MID

does not show in lower left corner, it's on high power)

Change Bands: BAND on receiver or mic

VFO Mode: V/MHz/SCAN

Memory Mode: M/CALL/PRIO until "M"

Choose Frequency: in VFO mode, turn dial

OR on mic: C(ENT/T-OFF)

Press 6 Frequency digits

Lock Frequency: SET/LOCK to toggle lock on and off

Lock Mic key pad: VFO/LOCK key on mic to toggle lock on and off

Scan: V/MHz/SCAN to scan; V/MHZ/SCAN to stop scan

Set CTCSS Tone: TONE/T-SCAN until "T" appears SET/LOCK until "T" and "rT" appear DIAL tone Frequency V/MHz/SCAN

Save to Memory: S/MW/MW DIAL memory channel

S,MW/MW

Clear a memory channel: From VFO mode (V/MHx/SCAN)

S/MW/MW

DIAL memory channel

S.MW/MW **S.MW/MW**

V.MHz/SCAN

Name a memory channel:

S.MW-MW "M" and memory channel number blink

Select memory channel

BAND

DIAL character, SET/LOCK between characters

S.MW/MW

Display Memory Channel Name:

M/CALL/PRIO to enter memory mode SET/LOCK repeatedly until "ANM-OF"

Dial to "ANM-ON" V/MHZ/SCAN

Listen on Reverse: MONI/DTMF

Turn off offset: LOW/DUP until "DUP" and "DUP-" go away

Weather Channel: M/CALL/PRIO until "WX"