

## ICOM ID-51a HandHeld

**BOLD** = hold for 2 sec.; CAPS = tap quickly

**SET POWER LEVEL:** V/MHz repeatedly to desired power level. If no level shows, you are on high

**VFO mode:** V/MHz

**MEMORY Mode:** M/CALL

**CHANGE BANDS:** in VFO, QUICK, RX.CS to “Band Select”, ENTER, RX.CS to desired band, ENTER

**CHANGE FREQUENCY:** V/MHz, dial to change 3<sup>rd</sup> digit, V/MHz twice, dial to change last three digits

**LOCK KEYPAD:** MENU, repeat to unlock

**SCAN:** MODE, MODE. MODE to stop

**SET TONE:** MENU, dial DUP/TONE, ENTER, Dial REPEATER TONE, ENTER, dial TONE FREQUENCY, ENTER, MENU

**SAVE TO MEMORY:** After all parameters are set, M/CALL, (dial repeater memory channel if needed), M/CALL

**NAME MEMORY CHANNEL:** In memory mode, select memory channel, QUICK, ENTER, Dial MNAME, ENTER, dial character,> to next character, dial character, > ..., ENTER, ENTER

## ICOM ID-51a HandHeld

**BOLD** = hold for 2 sec.; CAPS = tap quickly

**SET POWER LEVEL:** V/MHz repeatedly to desired power level. If no level shows, you are on high

**VFO mode:** V/MHz

**MEMORY Mode:** M/CALL

**CHANGE BANDS:** in VFO, QUICK, RX.CS to “Band Select”, ENTER, RX.CS to desired band, ENTER

**CHANGE FREQUENCY:** V/MHz, dial to change 3<sup>rd</sup> digit, V/MHz twice, dial to change last three digits

**LOCK KEYPAD:** MENU, repeat to unlock

**SCAN:** MODE, MODE. MODE to stop

**SET TONE:** MENU, dial DUP/TONE, ENTER, Dial REPEATER TONE, ENTER, dial TONE FREQUENCY, ENTER, MENU

**SAVE TO MEMORY:** After all parameters are set, M/CALL, (dial repeater memory channel if needed), M/CALL

**NAME MEMORY CHANNEL:** In memory mode, select memory channel, QUICK, ENTER, Dial MNAME, ENTER, dial character,> to next character, dial character, > ..., ENTER, ENTER