

YAESU FT-7800R

(BOLD = hold for 1 sec; CAPS = tap quickly)

Set Power Level: LOW(ACC), repeat to desired level

Change Bands: BAND(SET, repeat to desired band

Scan: SCAN(SEL) or Mic UP or Mic DOWN
SCAN(SEL) or PTT to stop

Set CTCSS Tone: TONE/REV repeat to "ENC"
BAND(SET), then Dial to "TN FRQ"
BAND(SET), then Dial tone frequency
BAND(SET), **BAND(SET)**

Tone Off: TONE(REV), repeat to "OFF"
BAND(SET): BAND(SET)

Disable Repeater Offset: **IN VFO BAND(SET)** then DIAL to "RPT.MOD"
BAND(SET), then DIAL to "RPT.OFF"
BAND(SET), then **BAND(SET)**
Rotating the dial one click will revert to normal offset.

Reverse Repeater input and output: **TONE(REV)**

Memory Store: Select frequency (and CCTSS Tone)
V/M(MW), Dial memory channel if different than next available
V/M(MW) to save or **V/M(MW)** to name
Dial first character of name
BAND(SET) after each character
(Mic DWN to move back a space)
BAND(SET)

Memory Recall: V/M(MW) to toggle between memory and VFO

See Memory Channel Frequency: Mic B

Delete Memory Channel: In memory mode, **V/M(MW)**
DIAL channel to be deleted, SCAN(SEL)

Weather Channel: **LOW/ACC**