

YAESU VX-6R HANDHELD

(BOLD = hold for 1 sec; CAPS = tap quickly)

Set Power Level: F/W then % repeatedly to desired level

Change Bands: BAND, repeated to desired band

Lock Keypad and Frequency Dial: %, repeat to unlock

Scan: **BAND** PTT to stop scan

Rotating dial one click either way reverses direction of scan

Check battery level: F/W then O/set

DIAL to "DC VLT", then O/Set

O/Set to exit

Set CTCSS Tone: F/W, then Mode

DIAL to "TONE", PTT

F/W, then 2/code

DIAL code frequency desired

2/code to save and exit

Tone off: F/W, then Mode

DIAL to "OFF", PTT

Reverse Repeater Input and Output: HM/REV

Turn Off Repeater Offset: IN VFO, F/W then 6(RPT)

Dial "SIMP", then PTT

Dialing one click off frequency cancels this

Memory Recall: V/M toggles between Memory and VFO

DIAL desired memory channel

Memory Store: Select frequency (and Tone)

F/W, (then Dial storage # if you don't want the next empty space)

F/W again to save and exit

Label Memory Chanel: Recall memory channel

F/W then 0/SET

Dial NM SET, 0/SET

Dial character, then MODE for next character

Repeat previous line for up to 6 characters

(BAND to back up a character)

(if < 6 characters: 0/SET)

PTT

See Frequency of named memory channel: Press MONI,

Label will reappear when MONI is released

Weather Channel: F/W then 9(SP BNK)

BAND, repeat to "WX CH"

DIAL preferred weather channel

F/W, then 9(SP BNK) to **exit**